



---

**COLD AND ROOM  
TEMPERATURE BOTTLE  
WATER COOLER**

**Model No.: 7LIECK-W-WL**

## **USER MANUAL**

**SAVE THIS MANUAL FOR  
FUTURE USE**

**For service call: 1-855-5-WHIRL-5**

# SAFETY PRECAUTIONS

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and your appliance. Always read and follow all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING"

These words mean:

**⚠ DANGER**

You can be killed or seriously injured if you don't immediately follow the instructions.

**⚠ WARNING**

You can be killed or seriously injured if you don't follow the instructions.

All safety instructions will inform you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** To reduce the risk of fire, electric shock, or injury when using your water cooler, follow these basic precautions:

- Plug it into a grounded 3-prong outlet.
- Do not remove the ground prong.
- Do not use an adapter.
- Disconnect the power before servicing.
- Replace all the parts and the panels before operating.
- Do not use an extension cord.
- Two or more people should move and install the water cooler and the bottles.

**SAVE THESE INSTRUCTIONS**

## When operating this dispenser, please observe the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- This dispenser is intended only for water dispensing. Do NOT use other liquids. Do NOT use for other purposes. Never use other liquids in the dispenser other than known and microbiologically safe bottled water. Warranty is void if used with any other liquids, such as coffee, tea, juices, beer or wine.

## Location Requirements:

- Install in the area where it is protected from the elements including direct sun.
- Install and use only on a hard, flat and level surface.
- Do NOT place the dispenser inside an enclosed space or cabinet.
- Position the dispenser no closer than 4 inches from the wall with at least 4 inches clearance on the sides to permit free airflow.
- Service should only be performed by a certified technician. Please contact us at 1-855-5-WHIRL-5 for assistance.

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## SAFETY PRECAUTIONS ---Electrical Requirements

### **⚠ WARNING**



#### Electrical shock Hazard

Plug into a grounded 3 prong outlet.  
Do not remove ground prong.  
Do not use an adapter.  
Do not use an extension cord.  
Failure to follow these instructions can result in death, fire, or electrical shock.

A 120 volt, 60 Hz., AC only, 15 amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended.

If codes permit and a separate ground wire is used, it is recommended that a qualified electrician determine that the ground path is adequate.

Check with a qualified electrician if you are not sure if the water cooler is properly grounded.

## PRODUCT FEATURES

**Congratulations! You have chosen an Advanced Technology State of the Art Water Cooler.**

The refrigeration system on this cooler cools the cold water by internal evaporator of commercial design flat forms the ice around it. This feature is called an "Ice Bank". It allows for ice cold water and keeps the water temperature consistently cold, however a Longer time in forming the Ice Bank is required. Since ice is an insulator, the more ice is built up, the slower next layer is made.

**WHEN UNIT IS PLUGGED IN FOR THE FIRST TIME WAIT FOR UP TO 6 HOURS FOR COLD WATER TEMPERATURES TO REACH THE COLDEST SETTINGS.**

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

# TABLE OF CONTENTS

Safety Precautions .....	2
Safety Precautions-Electrical Requirements .....	3
Product Features .....	3
Key Information for Future Use .....	4
Specifications .....	5
Parts & Features .....	5
Unpacking and Assembly .....	6
Installation .....	6
Cleaning Prior to Initial Use .....	8
Installing the Correct Bottle Receptacle .....	9
Operation .....	10
Proper Care & Cleaning .....	12
Troubleshooting .....	14
Limited Warranty .....	15

## KEY INFORMATION FOR FUTURE USE



Please register your dispenser immediately at [www.electrotemp.com](http://www.electrotemp.com)

For future support, please record your serial number (located on the label at the back of the dispenser) and purchase date. Staple your receipt to the manual.

You will need this information to obtain warranty service.

Product	<b>Cold and Room Temperature Bottled Water Cooler</b>
Model Number	<b>7LIECK-W-WL</b>
Serial ID Number	_____
Date of Purchase	_____


**IMPORTANT: Do NOT Return Dispenser To Store.**  
 If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

# SPECIFICATIONS



Power Supply	1.5 Amp
Refrigerant Type	R-134A
Cold Water Power	100 Watts
Cold Capacity / Hour	5 L / 1.32 Gallon
Cold Temp Range	3°C - 10°C / 37.4°F - 50°F
Dimensions	91.3 H × 27.5 W × 28.6 D (cm) 35.9 H × 10.8 W × 11.3 D (inch)
Net Weight	25.4 lbs / 11.5 Kg


# PARTS & FEATURES

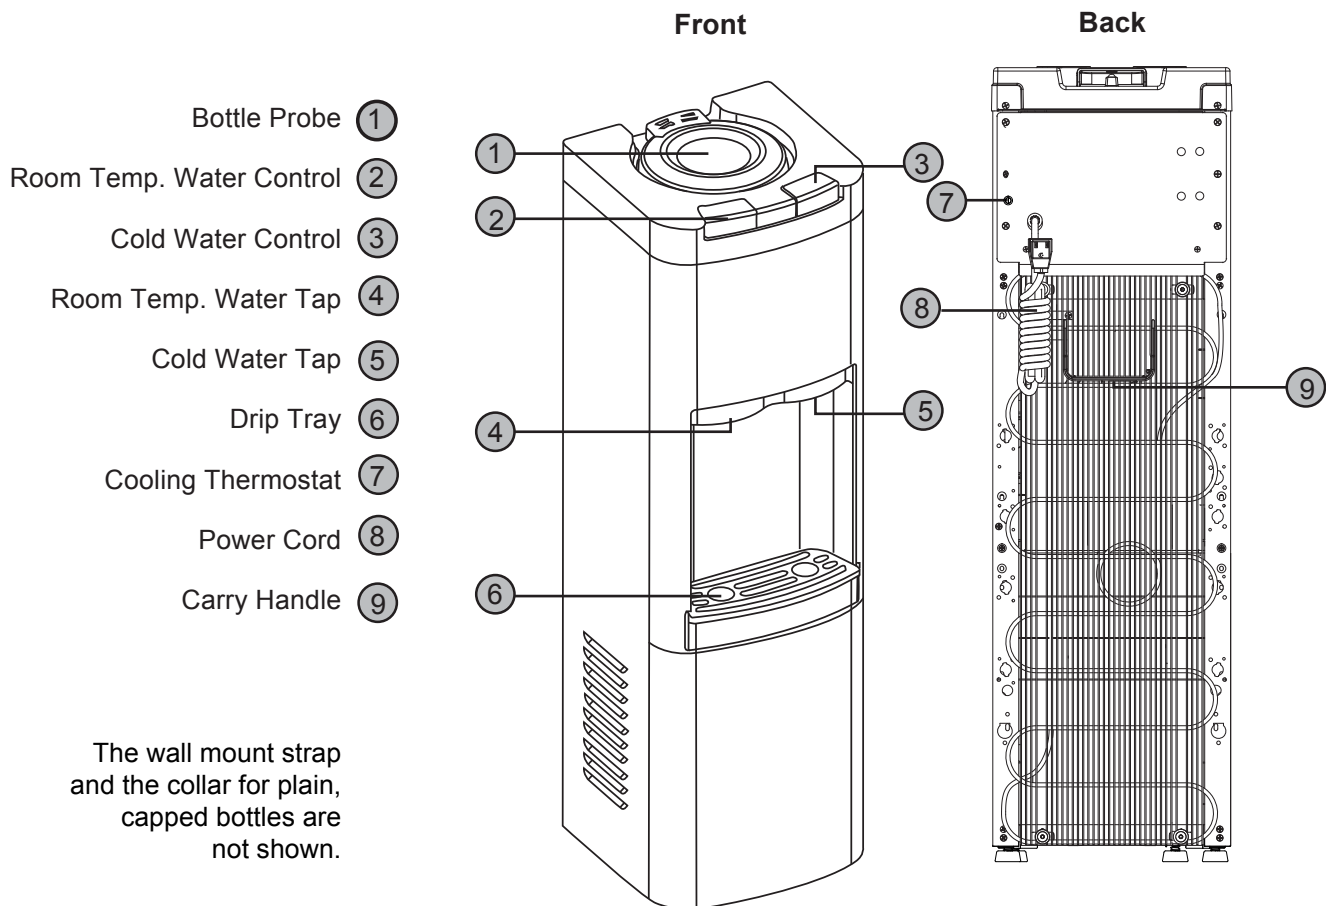


**IMPORTANT: Do NOT Return Dispenser To Store.**  
 If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## UNPACKING AND ASSEMBLY

Remove the dispenser from packaging:

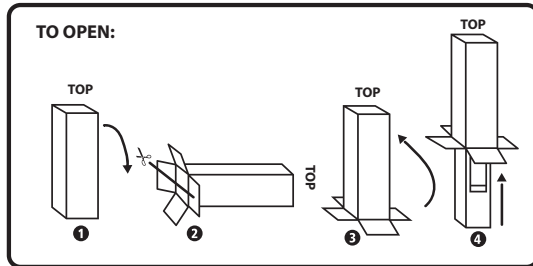


**⚠ WARNING**



**Tip Over Hazard**

Do not use water cooler until base is attached to bottom of water cooler.  
Failure to do so can result in death or serious injury.

1. Lay dispenser on its side.
2. Open bottom flaps of the cardboard box.
3. Stand cooler up with flaps unfolded.
4. Pull box straight up.
5. Unpack the drip tray and insert it into the dispenser.  
(See illustration )
6. Keep original packing for the duration of warranty.

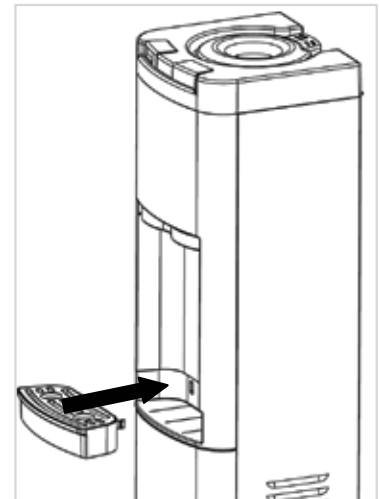


## INSTALLATION

**⚠ WARNING**

**Excessive Weight Hazard**

Use two or more people to move and install bottles.  
Failure to do so can result in back or other injury.

1. Locate the dispenser on a hard and level surface in a cool shaded location near a grounded wall outlet.
2. Position dispenser so that the back is at least 4 inches from the wall and there are at least 4 inches of clearance on both sides.
3. To minimize vibration and noise, make sure that all 4 feet are adjusted to keep dispenser levelled.

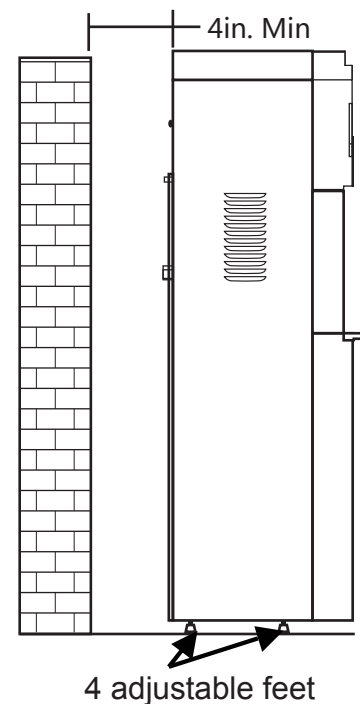

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

4. Install the Wall Mount Strap to prevent accidental tip over:




- Unclip the strap from the back of dispenser.
- Mount the strap 25 inches up from the floor directly to the wall stud with a screw (see Illustration A).

If the stud is not available, insert and turn the anchor directly into the sheet rock using a star shaped screwdriver (DO NOT drill a hole into the sheet rock first when using this anchor). Secure the strap by installing a screw through the washer, then the eyelet into the strap, and into the wall mounted anchor (see Illustration B).

- Position the cooler in place.
- Clip the strap onto the back of the cooler to either the right or left side (see Illustration C).
- Adjust the length of the strap.

**Note: The dispenser can be positioned in a corner but it still requires the Wall Mount Strap to be installed.**

**Adjust length of the wall strap accordingly.**

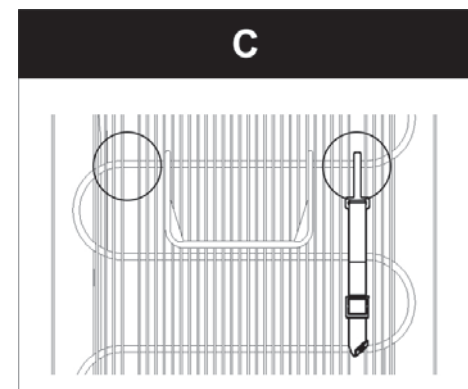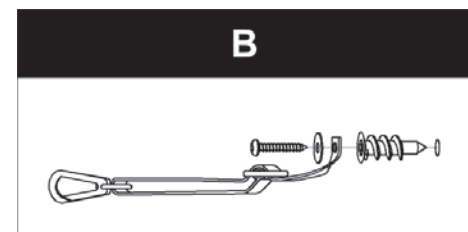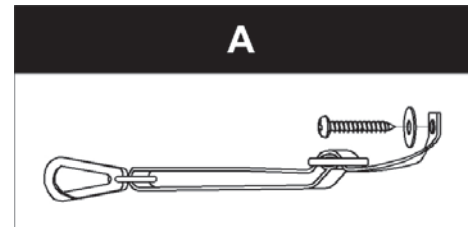

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## CLEANING PRIOR TO INITIAL USE


---

To remove any odors or dust that may have accumulated during shipment, you may want to clean the dispenser prior to first use.

DO NOT PLUG THE COOLER INTO AN ELECTRICAL POWER OUTLET AT THIS TIME.

Time Required for Set Up: 40 minutes.

1. Remove the bottle receptacle by turning it counterclockwise and pulling up.
2. Remove the plastic baffle from inside the reservoir. Clean with warm soapy water, rinse.
3. Fill the reservoir with a mixture of 1 gallon tap water and 1 teaspoon or unscented bleach (5.25% sodium hypochlorite).
4. Let sit for 30 minutes.
5. Remove the cleaning mixture from the reservoirs by dispensing the mixture from both taps into a pitcher.
6. Wipe the inside of the reservoir with a soft cloth.
7. Fill the reservoir with 1 gallon tap water.
8. Remove the water from the reservoir by dispensing it from both taps into a pitcher.
9. Reattach bottle receptacle to this unit.
10. Complete the installation and follow the operation instructions indicated in this manual.
11. Repeat rinsing cycle if chlorine taste persist.

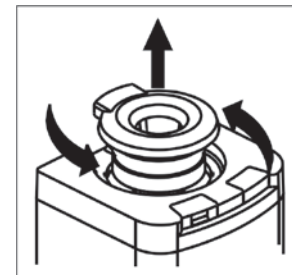

**To Remove Bottle Receptacle**


If your water has an off-taste, do not return the dispenser to the store. Call 1-855-5-WHIRL-5 for assistance.

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.




# INSTALLING THE CORRECT BOTTLE RECEPTACLE

If your water bottle looks like this

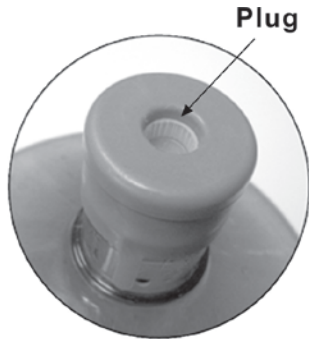


Then use this bottle receptacle


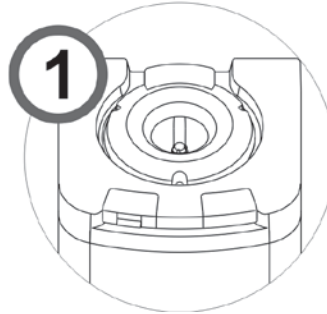


This model comes with a Probe Receptacle (1). No changes are required. The Probe will push the Plug out of the way when you place the bottle into the receptacle.


If your water bottle looks like this

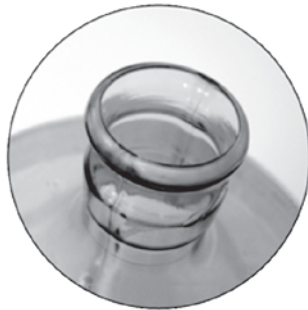

Then use this bottle receptacle

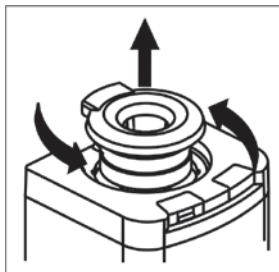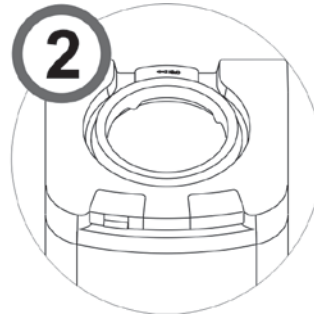

1. Remove the bottle receptacle (1) by turning it counterclockwise and pulling it up.
2. Remove the collar (2) from the foam packaging or bag in the front of dispenser.
3. Align the tabs.
4. Turn clockwise to secure.

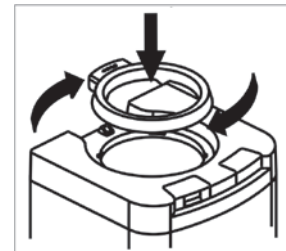

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## OPERATION

### IMPORTANT

This unit is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Warranty is void if used with any other liquids such as coffee, tea, juices, beer or wine.

This dispenser has been designed to use water bottles with a 3 or 5 gallon capacity. Do NOT use alternative bottles.

#### Initial Set Up

Note: To avoid damage to the compressor, allow the unit to sit upright for at least 4 hours prior to operation.

1. Remove the tamper seal from the bottle cap. Do NOT remove the plastic cap.
2. Clean the bottle cap and neck using a soft cloth and warm soapy water, then rinse afterwards.

#### **⚠ WARNING**

##### Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

3. Lift the bottle and insert onto the probe. Apply slight pressure until the plug inside the cap pushes in and the bottle is seated. Water will begin to flow into the reservoirs, causing air bubbles to form in the bottle.

#### **⚠ WARNING**



##### Electrical shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

4. Plug the cord into a properly grounded wall outlet.

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## Dispensing Cold Water

Note: After setup, it will take up to 6 hours to get the water to its maximum cold temperature. During this time, the compressor will run continuously. Compressor works to build up ice bank, this is normal.

1. Position the bottle, glass, pitcher, or cooking pot securely below the cold water tap.
  - The circular shapes in the drip plate help align the flow of water. This unit dispenses water at a fast rate. To avoid splashes, hold the cup as close to the tap as possible.
2. Press the cold water control downward to start dispensing water.
3. Release the cold water control once the desired fill level is achieved.

## Replacing an Empty Bottle

Note: Replace the bottle as soon as you notice that it is empty.

1. Lift the bottle straight up to disengage it from the bottle probe.

### **⚠ WARNING**

#### Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

2. Remove the tamper seal from the top of bottle cap of the fresh bottle. Do NOT remove the plastic cap.
3. Lift the bottle and insert it onto the probe. Apply slight pressure until the plug inside the cap pushes in and the bottle is seated. Water will begin to flow into the reservoirs, causing air bubbles in the bottle.

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## PROPER CARE & CLEANING

### General Cleaning

Perform: As needed

Time Required: 5 minutes.

Note: Do NOT use abrasive materials or chemical cleaners.

They may scratch surfaces and contaminate drinking water. For cleaning hard spots suggest rubbing with toothpaste.

1. Clean the cabinet surfaces using a soft cloth and warm soapy water, then rinse.
2. Wipe dust at the back of dispenser to improve efficiency.
3. Remove the drip tray assembly by pulling it forward. Remove the cover. Place the tray and cover in the dishwasher or wipe the parts clean using a soft cloth and warm soapy water.
4. Reattach drip tray assembly.

### Cleaning the Cold Reservoir and Water Lines

Perform: Every 3 months or whenever an off-taste occurs.

Time Required: 15 minutes.

Note: Best to do prior to loading a fresh bottle.

1. Unplug the power cord from the wall outlet.


#### **⚠ WARNING**

##### Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

2. Remove the water bottle.
3. Remove the bottle receptacle by turning it counterclockwise and pulling it up.
4. Remove the plastic baffle from inside reservoir. Clean it using warm soapy water, rinse.
5. Fill the reservoir with a mixture of 1 gallon tap water and 1 teaspoon of unscented household bleach.

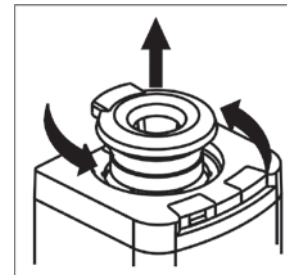

**To Remove Bottle Receptacle**

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

6. Let it sit for 30 minutes.
7. Remove the cleaning mixture from reservoirs by dispensing it from both taps into a pitcher.
8. Wipe the inside of reservoir with a soft cloth.
9. Fill the reservoir with 1 gallon tap water.
10. Remove the water from the reservoir by dispensing it from both taps into a pitcher.
11. Reattach bottle receptacle to this unit.

**⚠ WARNING****Excessive Weight Hazard**

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

12. Install a fresh bottle of water after cleaning the bottle cap and neck area.

**⚠ WARNING****Electrical shock Hazard**

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

13. Repeat rinsing cycle if chlorine taste persist.
14. Plug the power cord into a grounded wall outlet.

**IMPORTANT: Do NOT Return Dispenser To Store.**

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

# TROUBLESHOOTING

---

## **Dispenser is not operating.**

- Make sure that the power cord is properly connected to a working outlet.

## **Water is leaking.**

- Replace water bottle. Most common cause is a cracked bottle.
- Call 1-855-5-WHIRL-5 for assistance.

## **Push buttons are stuck and/or faucets are leaking.**

- Apply mineral oil (baby oil) to the button slides to reduce friction.

## **No water is coming from the taps.**

- Make sure that the bottle is not empty. If so, replace it.
- Make sure that you fully press the water controls.

## **Water dispensed is not cold.**

- It takes up to 6 hours after setup to dispense coldest water.
- Make sure that the back of the dispenser is at least 4 inches from a wall and that air is free to flow on all 4 sides of the dispenser.
- Make sure that the tank is not overfilled. Dispense water until bubbles appear in the bottle.

## **Dispenser is noisy.**

- Make sure that the dispenser is positioned on a level surface.

## **Water tastes bad.**

- Drain the water from the reservoirs and replace the bottle with a fresh one.
- Clean dispenser as outlined in “ Proper Care & Cleaning ” section.

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

## LIMITED WARRANTY

---

Electrotemp Technologies Inc., (“Vendor”) warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such dispenser shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor’s Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to original purchaser, freight or postage prepaid.

The Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the dispenser, as set out in the User’s Manual. In addition, the Limited Warranty does not cover damages to the finish, such as scratches, dents, discoloration or rust after purchase.

The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from seller other than authorized retailers or distributors. AFTER THE PERIOD OF THE ONE (1) YEAR EXPRESS WARRANTY, VENDOR DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, VENDOR SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to you.

Warranty is void if the electrical outlet is improperly wired to incorrectly sized circuit breaker or fuse, if not grounded properly, or wires do not have correct polarity.

Use of this cooler confirms Purchasers agreement with the conditions of this warranty.

Electrotemp Technologies Inc.  
406 Watline Avenue  
Mississauga, Ontario, Canada, L4Z-1X2  
888-828-1426  
[www.electrotemp.com](http://www.electrotemp.com)

**IMPORTANT: Do NOT Return Dispenser To Store.**  
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

® ™ © 2013 Whirlpool. All rights reserved.  
Manufactured under license by  
Electrotemp Technologies Inc., Mississauga, ON.  
Warranty provided by manufacturer.