



**Hot and Cold Bottled
Water Cooler**

Model No.: 7LIECH-BP-WL

USER MANUAL

**SAVE THIS MANUAL FOR
FUTURE USE**

For service call: 1-855-5-WHIRL-5

SAFETY PRECAUTIONS

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and your appliance. Always read and follow all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING"

These words mean:

▲ DANGER

You can be killed or seriously injured if you don't immediately follow the instructions.

▲ WARNING

You can be killed or seriously injured if you don't follow the instructions.

All safety instructions will inform you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: To reduce the risk of fire, electric shock, or injury when using your water cooler, follow these basic precautions:

- Plug it into a grounded 3-prong outlet.
- Do not remove the ground prong.
- Do not use an adapter.
- Disconnect the power before servicing.
- Replace all the parts and the panels before operating.
- Do not use an extension cord.
- Two or more people should move and install the water cooler and the bottles.

SAVE THESE INSTRUCTIONS

When operating this dispenser, please observe the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- This dispenser is intended only for water dispensing. Do NOT use other liquids. Do NOT use for other purposes. Never use other liquids in the dispenser other than known and microbiologically safe bottled water. Warranty is void if used with any other liquids, such as coffee, tea, juices, beer or wine.

Location Requirements:

- Install in the area where it is protected from the elements including direct sun.
- Install and use only on a hard, flat and level surface.
- Do NOT place the dispenser inside an enclosed space or cabinet.
- Position the dispenser no closer than 4 inches from the wall with at least 4 inches clearance on the sides to permit free airflow.
- Service should only be performed by a certified technician. Please contact us at 1-855-5-WHIRL-5 for assistance.

IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

SAFETY PRECAUTIONS ---Electrical Requirements

⚠ WARNING



Electrical shock Hazard

Plug into a grounded 3 prong outlet.
Do not remove ground prong.
Do not use an adapter.
Do not use an extension cord.
Failure to follow these instructions can result in death, fire, or electrical shock.

A 120 volt, 60 Hz., AC only, 15 amp, fused electrical supply is required. A time-delay fuse or circuit breaker is recommended.

If codes permit and a separate ground wire is used, it is recommended that a qualified electrician determine that the ground path is adequate.

Check with a qualified electrician if you are not sure if the water cooler is properly grounded.

PRODUCT FEATURES

Congratulations! You have chosen an Advanced Technology State of the Art Water Cooler.

The refrigeration system on this cooler cools the cold water by internal evaporator of commercial design flat forms the ice around it. This feature is called an "Ice Bank". It allows for ice cold water and keeps the water temperature consistently cold, however a Longer time in forming the Ice Bank is required. Since ice is an insulator, the more ice is built up, the slower next layer is made.

WHEN UNIT IS PLUGGED IN FOR THE FIRST TIME WAIT FOR UP TO 6 HOURS FOR COLD WATER TEMPERATURES TO REACH THE COLDEST SETTINGS.

IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

TABLE OF CONTENTS

Safety Precautions	2
Safety Precautions-Electrical Requirements	3
Product Features	3
Key Information for Future Use	4
Specifications	5
Parts & Features	5
Unpacking and Assembly	6
Installation	6
Cleaning Prior to Initial Use	8
Installing the Correct Bottle Receptacle	9
Operation	10
Proper Care & Cleaning	12
Troubleshooting	14
Limited Warranty	15

KEY INFORMATION FOR FUTURE USE



Please register your dispenser immediately at www.electrotemp.com

For future support, please record your serial number (located on label on back of dispenser) and date purchased. Staple your receipt to manual.

You will need this information to obtain warranty service.

Product **Hot and Cold Bottled Water Cooler**

Model Number **7LIECH-BP-WL**

Serial ID Number _____

Date of Purchase _____

IMPORTANT: Do NOT Return Dispenser To Store.
 If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.


SPECIFICATIONS



Power Supply	4.5 Amp
Refrigerant Type	R-134 A
Cold Water Power	100 Watts
Cold Capacity / Hour	5 L / 1.32 Gallon
Cold Temp Range	3°C - 10°C / 37.4°F - 50°F
Hot Water Power	425 Watts
Hot Capacity / Hour	4 L / 1.05 Gallon
Hot Temp Range	80°C - 92°C / 176°F - 197.6°F
Dimensions	91.3 H × 27.5 W × 28.6 D (cm) 35.9 H × 10.8 W × 11.3 D (inch)
Net Weight	26.5 lbs / 12 Kg

PARTS & FEATURES

- Bottle Probe (1)
- Hot Water Control (2)
- Child Safety Latch (3)
- Cold Water Control (4)
- Hot Water Tap (5)
- Cold Water Tap (6)
- Drip Tray (7)
- Energy Saving Switch (8)
- Cooling Thermostat (9)
- Carry Handle (10)
- Power Cord (11)
- Drain Plug (12)
- LED Night Light (13)

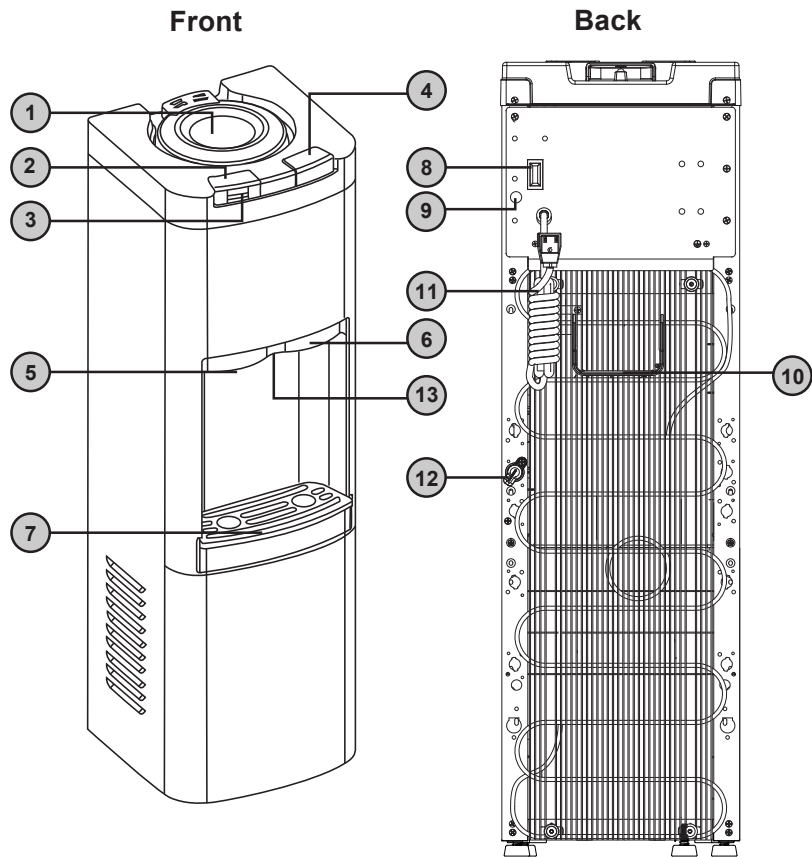


The wall mount strap and the collar for plain, capped bottles are not shown.


IMPORTANT: Do NOT Return Dispenser To Store.
 If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

UNPACKING AND ASSEMBLY

Remove the dispenser from packaging:

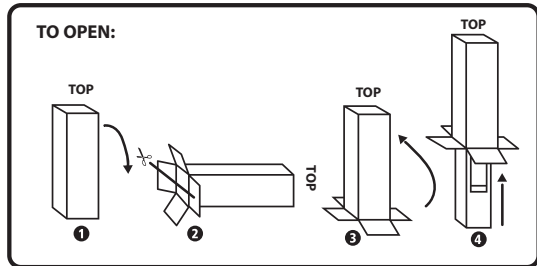


⚠ WARNING



Tip Over Hazard
Do not use water cooler until base is attached to bottom of water cooler.
Failure to do so can result in death or serious injury.

1. Lay dispenser on its side.
2. Open bottom flaps of the cardboard box.
3. Stand cooler up with flaps unfolded.
4. Pull box straight up.
5. Unpack the drip tray and insert it into the dispenser.
(See illustration)
6. Keep original packing for the duration of warranty.

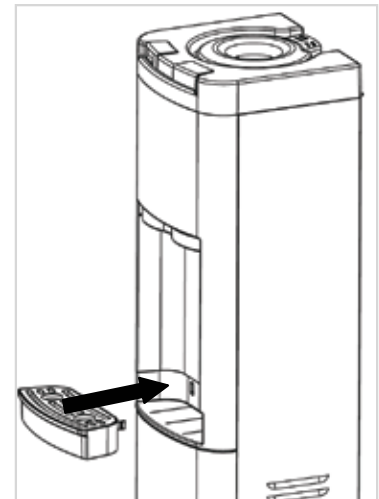


INSTALLATION

⚠ WARNING

Excessive Weight Hazard
Use two or more people to move and install bottles.
Failure to do so can result in back or other injury.

1. Locate the dispenser on a hard and level surface in a cool shaded location near a grounded wall outlet.
2. Position dispenser so that the back is at least 4 inches from the wall and there are at least 4 inches of clearance on both sides.
3. To minimize vibration and noise, make sure that all 4 feet are adjusted to keep dispenser levelled.

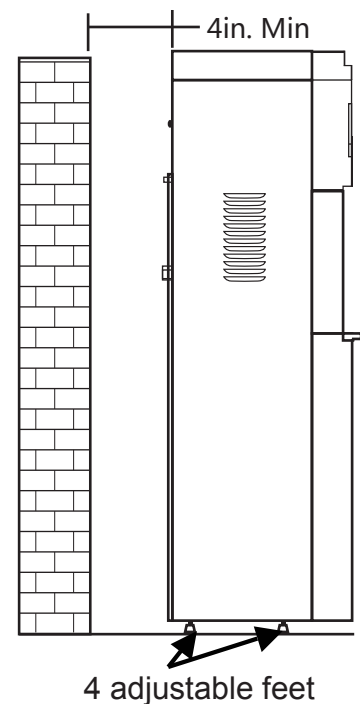

IMPORTANT: Do NOT Return Dispenser To Store.
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

4. Install the Wall Mount Strap to prevent accidental tip over:




- Unclip the strap from the back of dispenser.
- Mount the strap 25 inches up from the floor directly to the wall stud with a screw (see Illustration A).

If the stud is not available, insert and turn the anchor directly into the sheet rock using a star shaped screwdriver (DO NOT drill a hole into the sheet rock first when using this anchor). Secure the strap by installing a screw through the washer, then the eyelet into the strap, and into the wall mounted anchor (see Illustration B).

- Position the cooler in place.
- Clip the strap onto the back of the cooler to either the right or left side (see Illustration C).
- Adjust the length of the strap.

Note: The dispenser can be positioned in a corner but it still requires the Wall Mount Strap to be installed.

Adjust length of the wall strap accordingly.

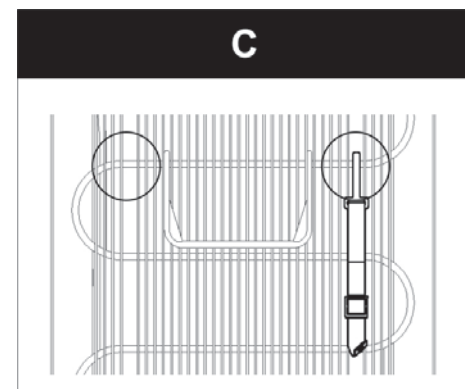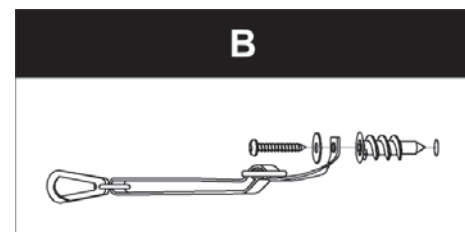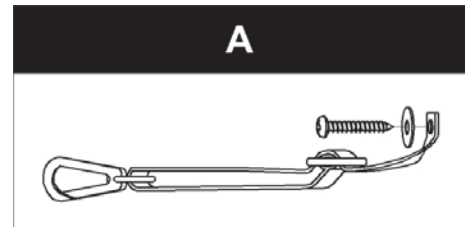

IMPORTANT: Do NOT Return Dispenser To Store.
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.


CLEANING PRIOR TO INITIAL USE

To remove any odors or dust that may have accumulated during shipment, you may want to clean the dispenser prior to first use.

DO NOT PLUG THE COOLER INTO AN ELECTRICAL POWER OUTLET AT THIS TIME.

Time Required for Set Up: 40 minutes.


1. Remove the bottle receptacle by turning it counter clockwise and pulling up.
2. Remove the plastic baffle from inside the reservoir. Clean with warm soapy water, rinse.
3. Fill the reservoir with a mixture of 1 gallon tap water and 1 teaspoon or unscented bleach (5.25% sodium hypochlorite).
4. Let sit for 30 minutes.
5. Dispense 1 cup of mixture through both faucets to clean out water ways.
6. Place a 2 gallon or larger bucket under the drain plug in the rear of the dispenser. Remove drain cap and drain plug.

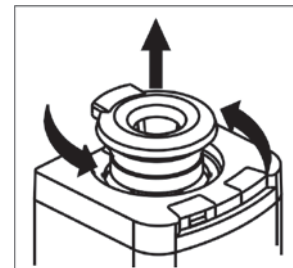

To Remove Bottle Receptacle

Reminder - Place the drain cap, drain plug and screw in a safe location so that they will not be lost.

7. Once unit has completed draining, empty the bucket and return it to under the drain cap.
8. Replace drain cap and drain plug.
9. Wipe the inside of the reservoir with a soft cloth.
10. Fill the reservoir with 1 gallon of tap water.
11. Dispense 1 cup of water through both faucets to rinse out water ways.
12. Remove the drain cap and the drain plug.

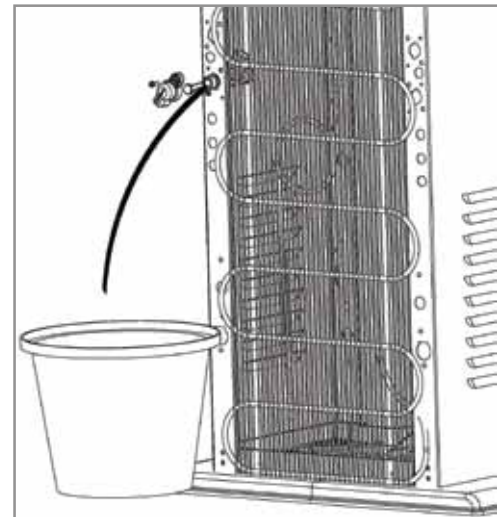

Reminder - Place the drain cap, drain plug and screw in a safe location so that they will not be lost.


13. Remove the water from the reservoirs by dispensing it from both taps into a pitcher.
14. Replace all parts. Reminder - Don't forget the drain plug and drain cap.
15. Complete the installation and follow the operation instructions indicated in this manual.
If your water has an off-taste, do not return the dispenser to store. Call 1-855-5-WHIRL-5 for assistance.

IMPORTANT: Do NOT Return Dispenser To Store.


If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

INSTALLING THE CORRECT BOTTLE RECEPTACLE

If your water bottle looks like this

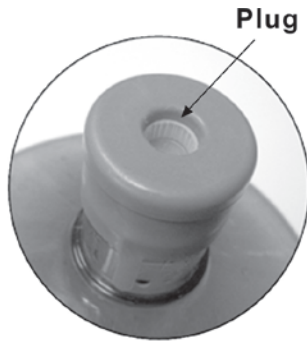


Then use this bottle receptacle


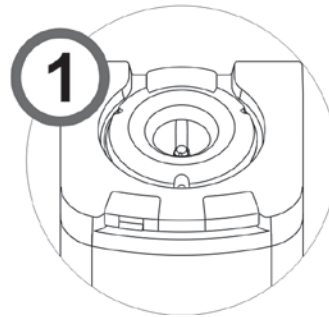


This model comes with a Probe Receptacle (1). No changes are required. The Probe will push the Plug out of the way when you place the bottle into the receptacle.


If your water bottle looks like this

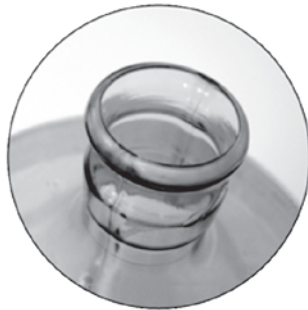

Then use this bottle receptacle

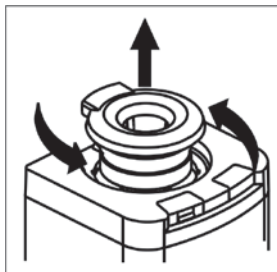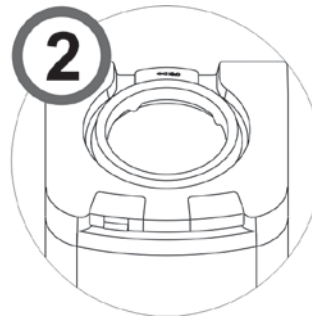

1. Remove the bottle receptacle (1) by turning it counterclockwise and pulling it up.
2. Remove the collar (2) from the foam packaging or bag in the front of dispenser.
3. Align the tabs.
4. Turn clockwise to secure.

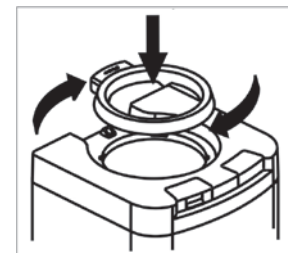

IMPORTANT: Do NOT Return Dispenser To Store.
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

OPERATION

IMPORTANT

This unit is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Warranty is void if used with any other liquids such as coffee, tea, juices, beer or wine.

This dispenser has been designed to use water bottles with a 3 or 5 gallon capacity. Do NOT use alternative bottles.

Initial Set Up

Note: To avoid damage to the compressor, allow the unit to sit upright for at least 4 hours prior to operation.

1. Remove the tamper seal from the bottle cap. Do NOT remove the plastic cap.
2. Clean the bottle cap and neck using a soft cloth and warm soapy water, then rinse afterwards.

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

3. Lift the bottle and insert onto the probe. Apply slight pressure until the plug inside the cap pushes in and the bottle is seated. Water will begin to flow into the reservoirs, causing air bubbles to form in the bottle.

⚠ WARNING



Electrical shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

4. Plug the cord into a properly grounded wall outlet.
5. Turn energy saving switch on back of dispenser to ON. This switch controls the heating of water. If you do not want hot water, turn this switch OFF.

IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

Dispensing Cold Water

Note: After setup, it will take up to 6 hours to get the water to its maximum cold temperature. During this time, the compressor will run continuously. Compressor works to build up ice bank, this is normal.

1. Position the bottle, glass, pitcher, or cooking pot securely below the cold water tap.
 - The right triangle below the cold water control indicates the location of the cold water tap(See Parts & Features NO. 6).
 - The circular shapes in the drip plate help align the flow of water. This unit dispenses water at a fast rate. To avoid splashes, hold the cup as close to the tap as possible.
2. Press the cold water control downward to start dispensing water.
3. Release the cold water control once the desired fill level is achieved

Dispensing Hot Water

1. Hot water available 15~20 minutes after set up.
2. Red arrow and target holes in the grill indicate positioning of you container for dispensing hot water.
3. Hold your container close to dispensing nozzle to avoid splashes.
4. To activate hot water dispensing nozzle push red lock inwards and hot button downwards.
5. To stop dispensing hot water release the button.

Replacing an Empty Bottle

Note: Replace the bottle as soon as you notice that it is empty.

1. Lift the bottle straight up to disengage it from the bottle probe.

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

2. Remove the tamper seal from the top of bottle cap of the fresh bottle. Do NOT remove the plastic cap.
3. Lift the bottle and insert it onto the probe. Apply slight pressure until the plug inside the cap pushes in and the bottle is seated. Water will begin to flow into the reservoirs, causing air bubbles in the bottle

IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

PROPER CARE & CLEANING

General Cleaning

Perform: As needed

Time Required: 5 minutes.

Note: Do NOT use abrasive materials or chemical cleaners.

They may scratch surfaces and contaminate drinking water. For cleaning hard spots suggest rubbing with toothpaste.

1. Clean the cabinet surfaces using a soft cloth and warm soapy water, then rinse.
2. Wipe dust at the back of dispenser to improve efficiency.
3. Remove the drip tray assembly by pulling it forward. Remove the cover. Place the tray and cover in the dishwasher or wipe the parts clean using a soft cloth and warm soapy water.
4. Reattach drip tray assembly.

Cleaning Cold Reservoir and Water Lines

Perform: Every 3 months or whenever an off-taste occurs.

Time Required: 15 minutes.

Note: Best to do prior to loading a fresh bottle.

1. Turn energy saving switch OFF.
2. Unplug the power cord from the wall outlet.

⚠ WARNING


Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

3. Remove the water bottle.
4. Unclip Wall Mount Strap from back of dispenser and turn dispenser around so backside is facing away from the wall.
5. Place a 2 gallon or larger bucket under the drain plug in the rear of the dispenser.
Remove the drain cap and the silicon plug. Cold water will immediately flow into the bucket. After several seconds, hot water will be dispensed.

Reminder - Place the drain cap screw and in a safe location so that they will not be lost.

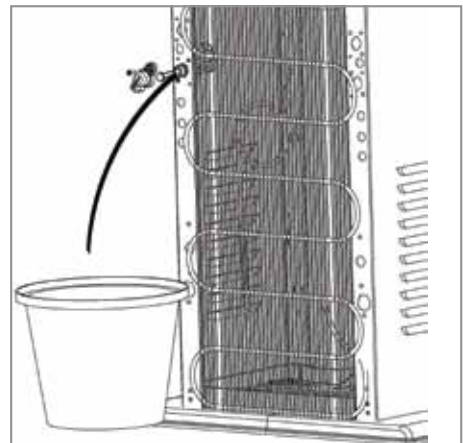


IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

6. Once unit has completed draining replace drain cap and drain plug.
7. Remove remaining water from cold reservoir by dispensing from both taps into a pitcher.
8. Remove bottle receptacle or collar by turning it counter clockwise and pulling up. Store in a safe place.
9. Remove plastic baffle from inside reservoir.
10. Clean bottle receptacle and baffle with a soft cloth using a mixture of one gallon tap water and 1 tablespoons unscented household bleach, then rinse.
11. Wipe inside of reservoir and area around both taps with a soft cloth using the mixture of one gallon tap water and 1 tablespoon unscented household bleach (i.e. 5.25% sodium hypochlorite).
12. Pour the one gallon tap water and 1 tablespoon unscented household bleach mixture into the reservoir.
13. Dispense 1 cup of mixture through both faucets to clean out water ways.
14. Place a 2 gallon or larger bucket under the drain plug in the rear of the dispenser. Remove drain cap and silicon plug to drain.

Reminder - Place drain cap and drain plug in a safe location so they are not lost.

15. Remove the cleaning mixture from reservoir by dispensing it from both taps into a pitcher.
16. Replace drain cap and drain plug.
17. Rinse system by repeating steps 12 – 15 above, but this time using 1 gallon of tap water.
18. Remove remaining water from reservoir by dispensing from both taps into a pitcher.
19. Replace all parts including silicon plug, drain cap, baffle and probe assembly.

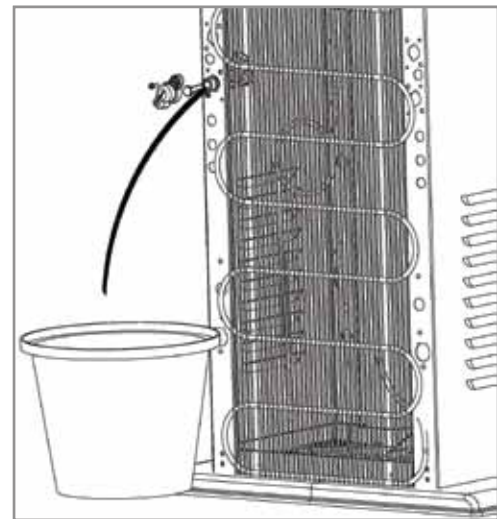

⚠ WARNING

Excessive Weight Hazard

Use two or more people to move and install the water cooler and the bottles.

Failure to do so can result in back or other injury.

20. Install a fresh bottle of water after cleaning bottle cap and neck area.
21. Repeat rinsing cycle if chlorine taste persists.
22. Plug power cord into grounded wall outlet.
23. Turn energy saving switch ON.

⚠ WARNING



Electrical shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

IMPORTANT: Do NOT Return Dispenser To Store.

If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

TROUBLESHOOTING

Dispenser is not operating.

- Make sure that the power cord is properly connected to a working outlet.

Water is leaking.

- Replace water bottle. Most common cause is a cracked bottle.
- Call 1-855-5-WHIRL-5 for assistance.

Push buttons are stuck and/or faucets are leaking.

- Apply mineral oil (baby oil) to the button slides to reduce friction.

No water is coming from the taps.

- Make sure that the bottle is not empty. If so, replace it.
- Make sure that you fully press the water controls.
- Remove bottle receptacle as per page 9 step 1. Shake bottle receptacle vigorously for a few seconds then replace.

Water dispensed is not cold.

- It takes up to 6 hours after setup to dispense cold water.
- Make sure that the back of the dispenser is at least 4 inches from a wall and that air is free to flow on all 4 sides of the dispenser.
- Make sure that the tank is not overfilled. Dispense water until bubbles appear in the bottle.

Water dispensed is not hot.

- It takes 15-20 minutes after setup to dispense hot water.
- Make sure that the power cord is properly connected to a working outlet.
- Make sure that the energy saving switch is ON.

Dispenser is noisy.

- Make sure that the dispenser is positioned on a level surface.

Water tastes bad.

- Drain the water from the reservoirs and replace the bottle with a fresh one.
- Clean dispenser as outlined in “ Proper Care & Cleaning ” section.

IMPORTANT: Do NOT Return Dispenser To Store.
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

LIMITED WARRANTY

Electrotemp Technologies Inc., (“Vendor”) warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, all parts in such dispenser shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor’s Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to original purchaser, freight or postage prepaid.

The Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the dispenser, as set out in the User’s Manual. In addition, the Limited Warranty does not cover damages to the finish, such as scratches, dents, discoloration or rust after purchase.

The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from seller other than authorized retailers or distributors. AFTER THE PERIOD OF THE ONE (1) YEAR EXPRESS WARRANTY, VENDOR DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. FURTHER, VENDOR SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to you.

Warranty is void if the electrical outlet is improperly wired to incorrectly sized circuit breaker or fuse, if not grounded properly, or wires do not have correct polarity.

Use of this cooler confirms Purchasers agreement with the conditions of this warranty.

Electrotemp Technologies Inc.
406 Watline Avenue
Mississauga, Ontario, Canada, L4Z-1X2
888-828-1426
www.electrotemp.com

IMPORTANT: Do NOT Return Dispenser To Store.
If you have a question or problem, please contact 1-855-5-WHIRL-5 for assistance.

® ™ © 2013 Whirlpool. All rights reserved.
Manufactured under license by
Electrotemp Technologies Inc., Mississauga, ON.
Warranty provided by manufacturer.